

SANI SPORT / SANI DEFENX VE OPERATING MANUAL



Instructions for Use

510 Hodge, Saint Laurent, QC, H4N 2A4

Toll Free: 1-877-262-5801, Tel.: 514-382-1140, Fax: 514-382-8249

CONGRATULATIONS ON CHOOSING THE SANI SPORT / SANI DEFENX VE

The VE is the most efficient and cost effective way to significantly reduce bacteria in enclosed spaces such as locker rooms, waiting areas and offices.

Please keep this guide for future reference. Should you need a new copy, simply call 1-877-262-5801 or email marketing@sanisport.ca



Getting Started



Safety



Instructions



Additional Information



GETTING STARTED

GENERAL INFORMATION

The Sani Sport / Sani Defenx VE, referred to throughout this document as the VE, is a proven delivery system of Hydrogen Peroxide vapor. Hydrogen Peroxide is a strong oxidizer used for high level disinfection and sterilization. Ozone is simultaneously added to enhance the process. The vapor generator, high velocity distribution nozzle and cyclone fans, provide an even distribution of Hydrogen Peroxide to all areas of the enclosed room to maximize contact with pathogens.

The VE will significantly reduce harmful bacteria and viruses such as

- Mumps
- MERS
- S. aureus
- S. aureus MRSA
- Clostridium difficile
- Influenza Virus A (H1N1)

CLEANING AND CARING

The VE machine requires little maintenance. You may choose to wipe down the stainless steel body with a damp rag from time to time. If the Neutralizer and Disinfectant tubes become clogged, please use compressed air to unclog the tubes. If you suspect that your machine is not working correctly or a part needs to be replaced, simply email orders@sanisport.ca. A member of the Sani Sport team will call you to resolve your issue promptly. Alternatively, please call us at 1-877-262-5801.

MOBILITY

The VE comes with a travel case to ensure that it is properly protected in transport. The VE sits on 4 caster wheels, making it easy to maneuver in every situation. The dimensions of the VE are 30.5" deep X 11" wide x 24.25" high.



CONSUMABLES

Your VE may have been shipped with 2 empty 32 oz. bottles. If this is the case, the 2 consumable liquids will be shipped separately. When you receive them, simply fill the empty 32 oz. bottles. Please ensure that the disinfectant and neutralizer go in their respective bottles. Then, simply insert the hose back in the bottles through the cap hole. Please note, the VE sprays approximately 1 oz. of liquid for every hour it runs. Please keep this in mind as you will need to reorder liquids at some point.

SANITIZING TIPS

The VE will be most effective when sanitizing one room at a time. For best results, please close doorways to ensure that the VE sanitizes the specific room it is placed in. The VE will treat all surfaces and items in the room including, but not limited to:

- Desks
- Phones
- Chairs
- Lamps
- Light switches
- Door handles
- Floors
- Ceilings

The VE will also sanitize ambient air.



SAFETY

The VE is UL and CE certified.

Please note, the operator cannot be present in the room while the VE is operating. For your convenience, we have enclosed a color coded wire. When affixed to the front of the machine, red illumination indicates the cycle is running, green illumination indicates the cycle has ended. This system will help you determine when you can reenter the room. Simply place the other end of the wire under the door so you can see when the cycle is complete.

You may also choose to run the VE at night to ensure no one enters the room during the cycle.



INSTRUCTIONS

Note: The VE does not need to be placed in the center of the room. The VE is equipped with a high level fan which ensures the entire room gets treated.

Turn the power switch to the ON position.


Select one of the preset cycles:

DESIGNATION	CYCLE TIME	ROOM SIZE
S	30 MINS	UNDER 600 SQ FT
M	60 MINS	600-1000 SQ FT
L	90 MINS	1000-1600 SQ FT

If the square footage exceeds 1600, simply use the + and – buttons to manually adjust the cycle time. The time increases or decreases in 10 minute intervals. The maximum cycle time is 240 minutes.

Once you have determined the appropriate cycle time, simply press the “cycle” button and exit the room. The cycle will start immediately.

Treating an area with the VE will minimize the bacteria and viruses in that area. We recommend that high traffic areas be treated twice a week for optimal results.

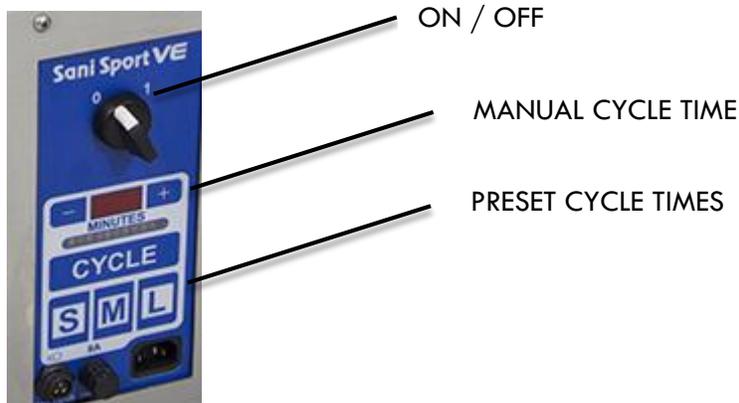



Additional Information

Enclosed Spaces for VE Use

- Waiting areas
- Locker rooms
- Class rooms
- Offices
- And many more

Placing an Order

The VE requires Neutralizer and Disinfectant to sanitize enclosed spaces. When you see that your liquids are running low, simply visit our online shopping cart at www.sanisport.com or call us at 1-877-262-5801.

For marketing materials, including digital photos and logos, please email marketing@sanisport.ca. A Sani Sport representative will email you materials for use.