

# Sani Sport

# Sani DefenX

DOUBLE OWNER'S MANUAL



# CONGRATULATIONS ON CHOOSING THE SANI SPORT / SANI DEFENX DOUBLE

Sani Sport / Sani Defenx is the most effective and cost efficient way to neutralize bacteria and pathogens in athletic equipment and tactical gear.

Please note your machine has been crated to ensure that it has not been damaged during the shipping process.

Please keep this guide for future reference. Should you need a new copy, simply call 1-877-262-5801 or email [marketing@sanisport.ca](mailto:marketing@sanisport.ca)



Getting Started



Safety



Instructions



Additional Information

510 Hodge, St-Laurent, QC H4N 2A4

Toll free: 1-877-262-5801, Tel: 514-382-1140, Fax: 514-382-8249, email: [marketing@sanisport.ca](mailto:marketing@sanisport.ca)



## GETTING STARTED

### **GENERAL INFORMATION**

This document contains important information and must be kept for future reference.

The Sani Sport / Sani Defenx machine significantly reduces harmful bacterial in athletic equipment and protective gear. The Sani Sport / Sani Defenx machine attacks the following pathogens amongst many others

- Staphylococcus aureus
- Staphylococcus aureus MRSA
- Candida albicans
- Influenza
- Clostridium difficile
- Enterovirus

### **CLEANING AND CARING**

The Sani Sport / Sani Defenx machine requires little maintenance. You may choose to wipe down the stainless steel cabinet with a damp rag from time to time. If you suspect that the machine is not working correctly or a part needs to be replaced, please email [marketing@sanisport.ca](mailto:marketing@sanisport.ca). A member of the Sani Sport / Sani Defenx team will call you to resolve your issue promptly. The technical life of the machine is 15-20 years.

### **MOBILITY**

The Sani Sport / Sani Defenx machine sits on 4 caster wheels making it easy to manoeuvre. The Sani Sport / Sani Defenx Double dimensions are 23" deep X 89" wide by 67" high. Some Sani Sport / Sani Defenx operators choose to design a custom Sani Sport / Sani Defenx trailer to transport their machine.




## **SAFETY**

The Sani Sport / Sani Defenx Double is CE and UL certified.

The Sani Sport / Sani Defenx machine has breaks on the two front wheels. Please ensure that the brakes have been applied when using the machine.

Please note, it is not recommended to open the cabinet doors while the machine is in use. There is no emergency stop button on the machine. No moving parts are exposed. Should you wish to stop the cycle once it has already started, please use the on/off button. Please use the machine in a well lit room as there is no lighting in the machine.

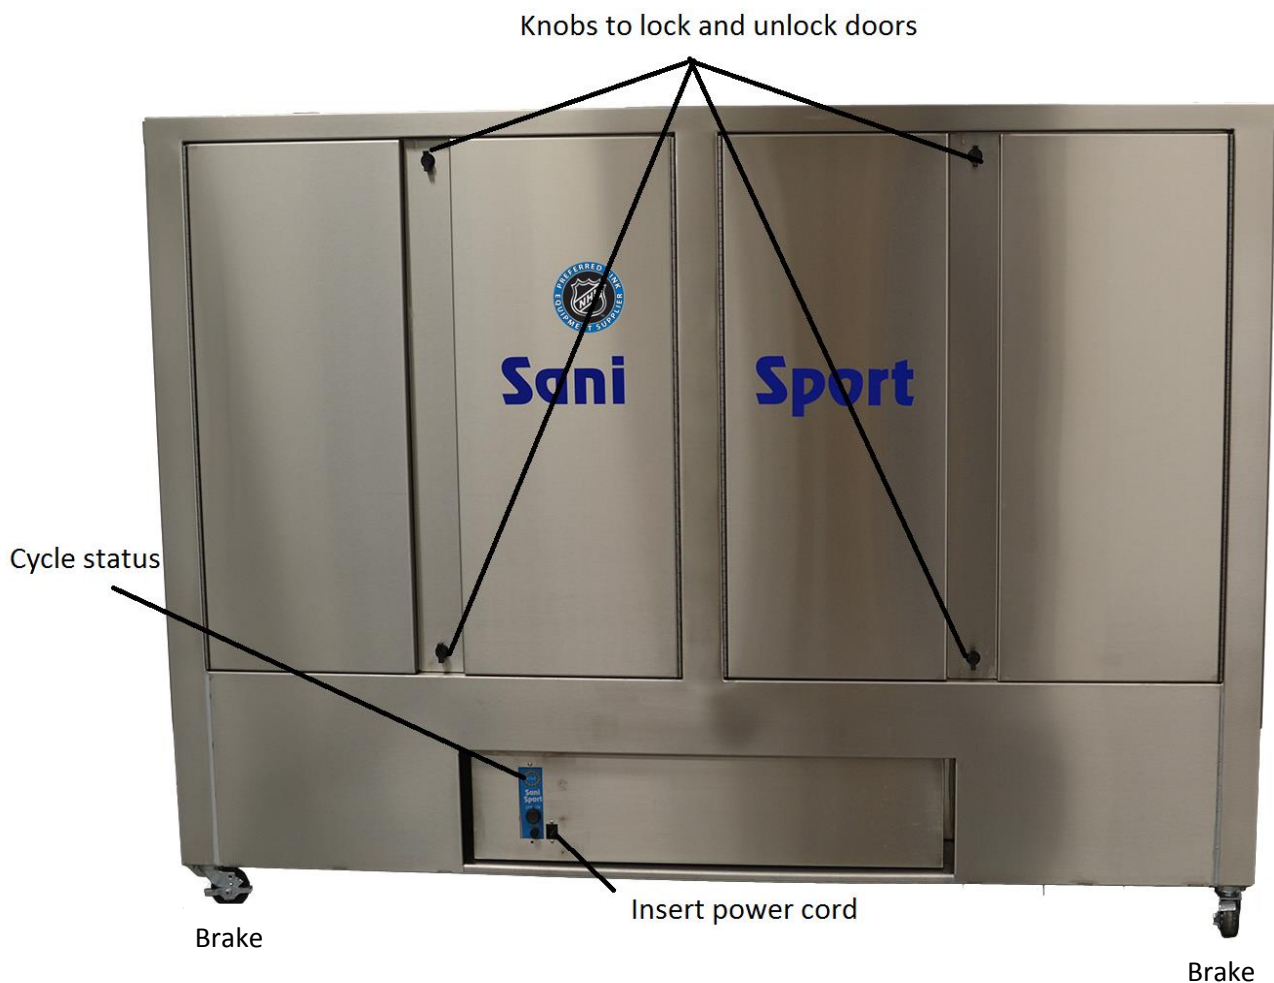

510 Hodge, St-Laurent, QC H4N 2A4

Toll free: 1-877-262-5801, Tel: 514-382-1140, Fax: 514-382-8249, email: [marketing@sanisport.ca](mailto:marketing@sanisport.ca)



## INSTRUCTIONS

Prior to first use, please insert the electrical cord into a standard outlet. If your machine has been shipped overseas, it will have a transformer to accommodate the voltage required.

Please follow the steps below to use the machine:

- Open the cabinet doors by unlocking the black knobs at the top and bottom of the cabinet
- Place the equipment on the shelves
  - o Larger items should be on higher shelves to allow ozone to circulate throughout the cabinet
  - o For best results, take the equipment apart as much as possible (ex: remove all Velcro from pads, remove insoles from boots or skates and place them as separate items in the machine).
  - o Do not place items on top of each other
  - o For best results, the equipment should be dry
- Once all items are placed properly in the cabinet, the operator should close and lock the doors using the black knobs at the top and bottom of the cabinet
- Turn the power on
- The green circles around the cycle button signify that the machine is ready for use
- Press the cycle button to start the 12 minute process
- Red dots will appear and then begin to disappear in a circular fashion indicating the time remaining for the portion of the cycle. The first part of the cycle is generating purified air through Fan 1. This lasts 3 minutes.
- There will then be 20 seconds of red circles going in opposite directions. This signifies the change from Fan 1 to Fan 2.
- Fan 2 will then have a 3 minute cycle of generating purified air. This will be shown in red dots disappearing as was the case with Fan 1.
- Yellow dots will now appear to count down the ozone destruct / waiting period. This phase lasts 6 minutes.
- Green dots will follow the yellow dots to announce that the cycle is complete and the equipment can be removed.





## *Additional Information*

### **Drimax**

If you have purchased your Sani Sport / Sani Defenx with the Drimax system, please note, the drimax will turn on by itself during the cycle.

### **Items that can be placed in the machine**

All sports equipment and protective gear can be placed into the Sani Sport / Sani Defenx cabinet, including but not limited to:

- Skates
- Pads
- Helmets
- Cleats
- Sports bags / gym bags
- Gloves
- Body armour
- Boots
- Hazmat suits
- Tents
- Sleeping Bags

Jerseys and socks may be placed in the Sani Sport / Sani Defenx cabinet but they can also be washed in a traditional washing machine.

### **Additional Items for your machine**

The following items are available for purchase by calling 1-877-262-5801.

- Sani Sport / Sani Defenx *pretreated plastic bags* to place sanitized equipment in after the cycle
- *Bacteriacide spray* can be sprayed directly onto the equipment after the cycle is complete. The spray may be used in full concentrated form or may be diluted to a 3 to 1 ratio (3 parts water, 1 part bacteriacide)
- Additional posters and banners

For marketing materials, including digital photos and logos, please email [marketing@sanisport.ca](mailto:marketing@sanisport.ca). A Sani Sport / Sani Defenx representative will email you materials for use.